



How To: Obtain Board Exceptions

Issue Date: 02/12/07




1.0 Overview

This document provides instructions and information on how to obtain a board's exception information in the event of failure.

NOTE: This document was written using v4.8 software.

2.0 Reproduce Issue

1. Reproduce the board crash.
2. Access your board's web server: <http://xx.xx.xx.xx>
3. The default password and User Name are always: Admin.
4. Go to the FAE page: <http://xx.xx.xx.xx/FAE>
5. Follow the link named 'Cmd Shell'; the screen displayed below opens:

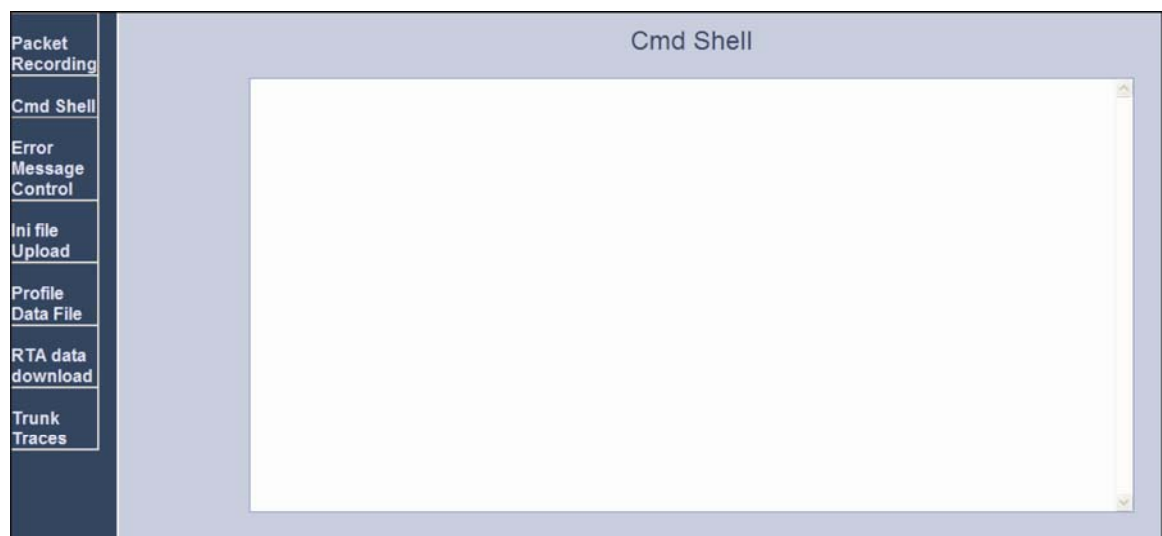

3.0 Run Cmd Shell

4. In the command line, run the following sequence:
BSP
EXC
RR
EI
This outputs the reset reason (RR) and the exception info (EI) on the screen if there was such an exception.
5. Use the **ENTER** button at the bottom of the screen.