

## Welcome

This Quick Set-Up Reference is supplementary to the AudioCodes Recorder User Guide and the IPX Quick Install that provides quick installation instructions for the SmartWORKS IPX. For information on how to use and configure the IPX board, refer to the SmartWORKS User's Guide and the IPX Integration Guide.

This document provides simple instructions for installing the AudioCodes recorder.

**NOTE: The IPX-C is for use only with compatible UL Listed PC, server etc. that have installation instructions detailing user installation of card cage accessories.**

## Installing the SDK:

**NOTE: It is recommended to first install the SmartWORKS SDK and the IPX board before installing the SR SDK.**

1. Execute the InstallShield Wizard to start the recorder installation.
2. Select whether to install a Master Server or a Remote Server.


The following is installed on the Master Server:

- SR Library (SDK)
- SR device manager
- a single recording resource
- an SRMon component

The following is installed on the Remote Server:

- a single recording resource
- an SRMon component

3. The recorder SDK and recording resources are automatically installed in C:\Program Files\AudioCodes USA\Soft Recorder.

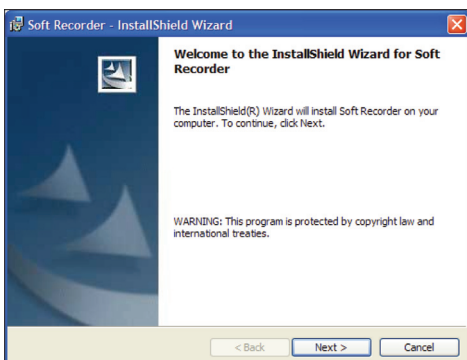

**NOTE: When upgrading copy your new SR license key before uninstalling the software. A valid license is required by the Gridborg server during the uninstall/install process!**

## Installing the License Key

**NOTE: The license key has been emailed to you and is not included in this kit.**

Before running the recorder, the license key must be copied over to the proper directory. Do the following:

1. Locate the email from AudioCodes USA containing your license key file (.lic file).
2. Save the file into the following folder:

C:\Program Files\AudioCodes USA\Soft Recorder

**IMPORTANT RECORDING INFORMATION: When running Windows 2000 or XP, the operating system's firewall must be disabled or the RTP media will not pass through. Users must be aware that automatic Windows updates may re-enable the firewall. AudioCodes recommends disabling this feature also when running your system in the field.**

## Verify the License Key

A SmartKey.exe utility has been shipped with the recorder and is installed with the SDK. This utility allows users to view the license key information that pertains to their installation. When executed, the SmartKey utility displays the following information:

Customer Name - the name used during the installation  
 IPX Serial # - the serial number of the IPX board linked to this license key  
 Issued Date - the date this license key was generated for use  
 Number of Sessions - the maximum allowable number of session resources available on this recording system

